 
 


ANGLEPOISE®

Type 75™ | Designed by Sir Kenneth Grange

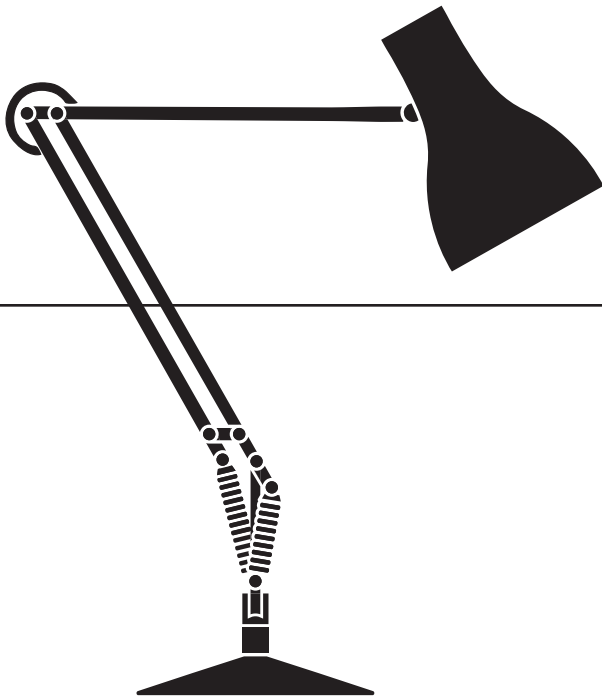

Type 75™
Desk Lamp

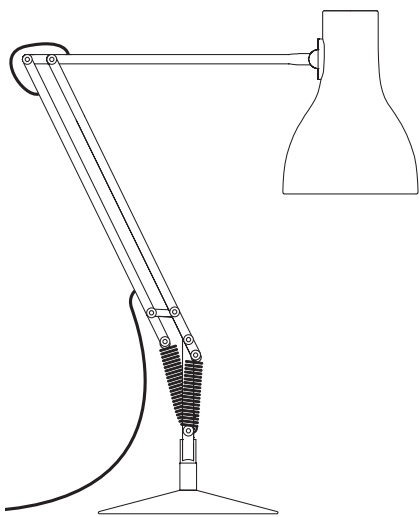

ANGLEPOISE®

 
Type 75™ Desk Lamp

Assembly Parts and Tools:

Your Anglepoise comes supplied with everything you need to assemble and install your product. The assembly parts and tools you'll find in the box are:



2x 100217
Allen Key



2x 100033
Anglepoise Grub
Screw

 
PARTS NOT TO SCALE

Bulb Information:

Your Anglepoise comes supplied with a 10W E27 LED bulb with a colour temperature of 2700K. This is the bulb we recommend for most applications.

If you require a different light output you can use an alternative bulb but, if the bulb is of a greater weight, balance may be affected. Recommended bulb weight 25g-60g. Recommended colour temperature: 2700K


Important: Do not use a bulb which exceeds the maximum wattage indicated inside the shade.

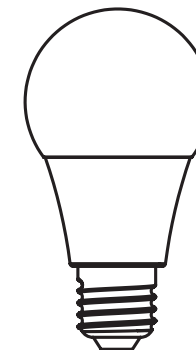

E27 MAX 10W





 E27 MAX 20W




Adjustment:

  Your Anglepoise lamp is a finely balanced product. Ensuring the bulb is of the correct weight is essential for achieving balance. Use the Allen keys provided to fine tune the arms. See below.

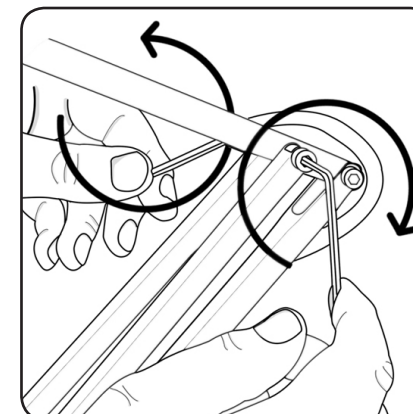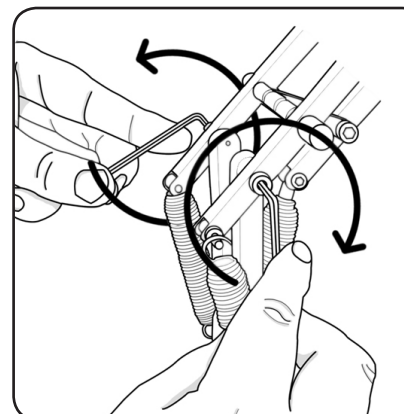

Installation

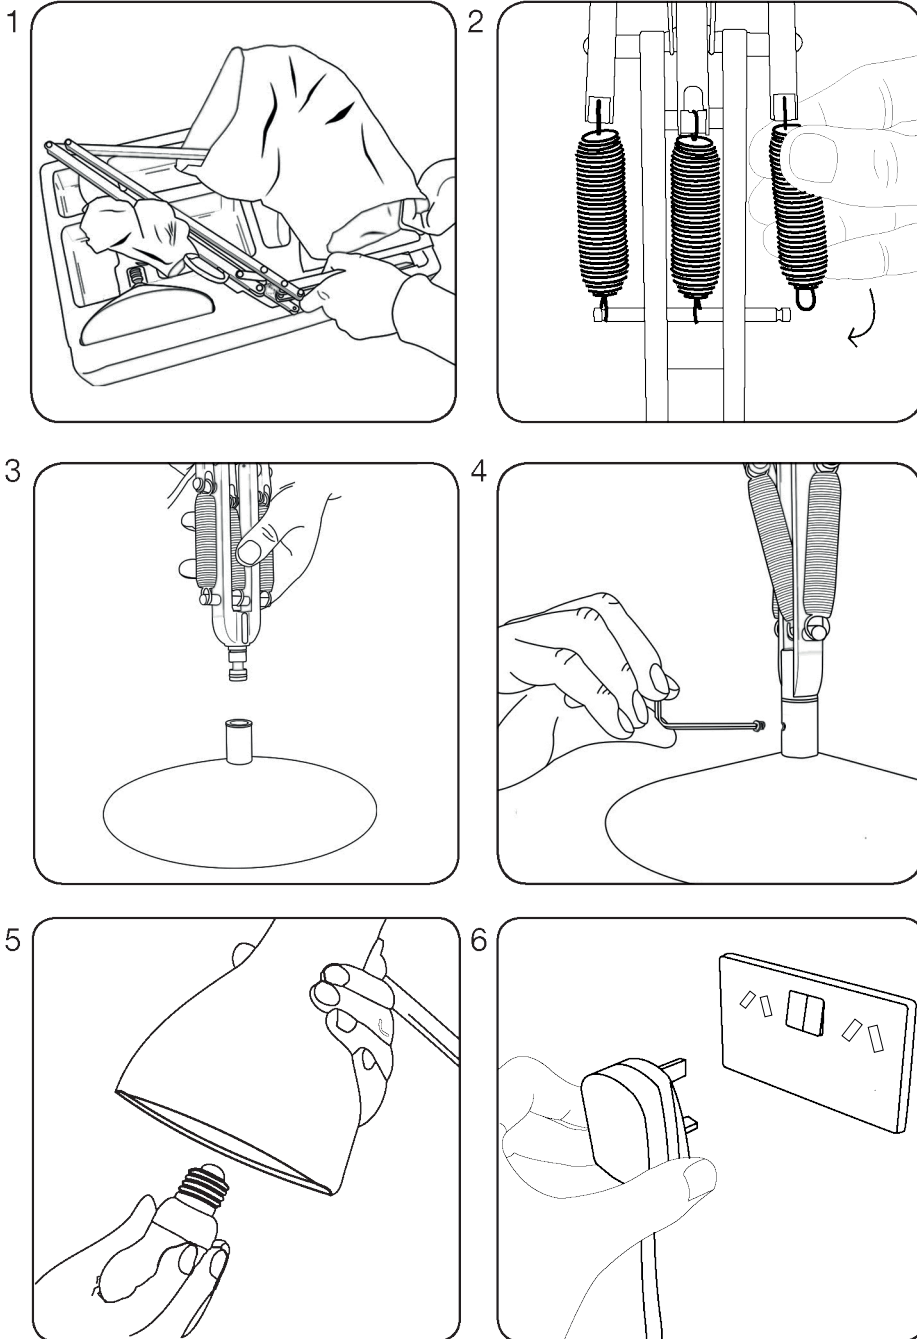 

INSTRUCTIONS

1. Remove base from the packaging and place onto an even surface.
2. Attach the two outer springs to the lamp.
3. Take the lamp and place it onto the base, ensuring it is fully seated.
4. Screw in the locating grub screw using the Allen key provided.
5. Screw in the bulb.
6. Plug the product in and turn it on using the inline switch.

ADJUSTMENT

Your Anglepoise is a finely balanced product. To adjust the lamp, place on a level surface as a sloping surface will upset the balance. If necessary, carefully tighten the nuts until the shade and arms support themselves in any position. To avoid damage caused by excessive force, please take care with the movement range and characteristics of your product. It is also advisable to allow the shade to cool before adjustment or repositioning.

MAINTENANCE

Prior to cleaning or maintenance, always switch off and disconnect from the electricity supply and allow the shade to cool. Repairs and the replacement of damaged cables or electrical parts should only be carried out by a qualified electrician, an authorised distributor or by Anglepoise Ltd.

Your product should only be used in a dry indoor environment.

It is essential that any replacement bulb does not exceed the maximum wattage indicated inside the shade.

QUALITY AND SAFETY

This product is marked to demonstrate conformity with relevant directives.

The minimum operating distance from illuminated objects and surfaces is 0.2m.
Rated Voltage: 220V-240V AC / 50-60Hz.