

# Bureau Tallboy

Bring clean, modern lines to your bedroom with this Bureau Tallboy. You are spoilt for storage space with four roomy drawers accessed by recessed drawer handles.

**Designed in New Zealand by Città**



[cittadesign.com/collection/bureau](https://cittadesign.com/collection/bureau)

Ask us about our payment partners | [cittadesign.com/payment-partners](https://cittadesign.com/payment-partners)  
[citta@cittadesign.com](mailto:citta@cittadesign.com)

**CITTÀ**

---

**MATERIAL**

Oak/MDF/Veneer

---

**COLOUR**


Natural Oak SNP0156TB



---

**DIMENSIONS**

Packaged	65x185x10.5cmh
Assembled	85x47x108cmh

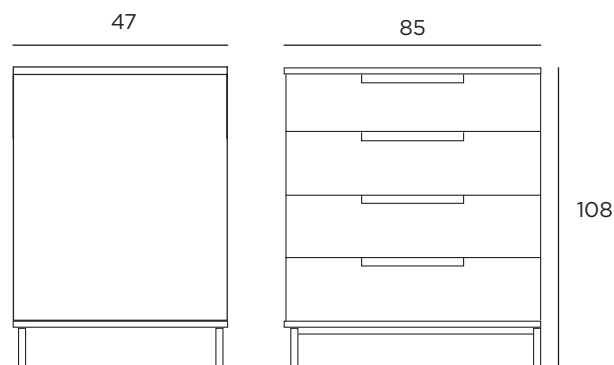

---

**ASSEMBLY**

Assembly not required

---

**WEIGHT**

Packaged	53.5kg
Assembled	51kg

---

**CARE/CLEANING INSTRUCTIONS**

Clean with a soft damp cloth and water only. Do not use chemical cleaners on any surfaces. Avoid leaving water sitting on the wood as this can cause small spots and permanent marks - wipe immediately with a dry cloth. Wipe the lacquered surface using straight strokes not in a circular direction. After wiping the area use a dry cloth to remove any moisture left on the surface. General care: We do not recommend placing your furniture in direct sunlight or near sources of heat. This is due to the natural characteristics of wood as it expands and contracts with changes in humidity. Placing your furniture in these environments may cause the timber to dry out; shrink and crack. Do not place hot or sharp objects on the surface of the wood as this can cause irreparable damage. Also avoid using any harsh solvents such as nail polish remover/alcohol at all times

---

[cittadesign.com/collection/bureau](http://cittadesign.com/collection/bureau)

Ask us about our payment partners | [cittadesign.com/payment-partners](http://cittadesign.com/payment-partners)  
[citta@cittadesign.com](mailto:citta@cittadesign.com)

**CITTÀ**