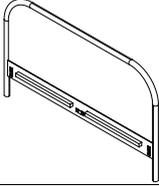
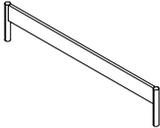
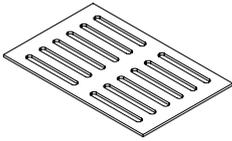
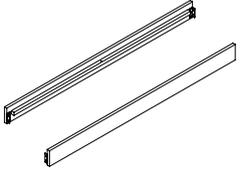
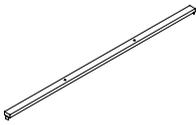


CITTÀ


Arc Bed

Headboard	Footboard	Slats x 2	Side Rails x 2
			
Centre Brace	Legs x 2	Cross Brace	Allen Keys 1 x M6, 1 x M8
			
M8 Nuts + Spring Washer x 8	M8 Screws x 2	M6 Screw, Washer + Spring Washer x 2	Wrench
			

Assemble the Arc bed on a soft clean surface. You will need two people for assembly.


Step 1

Locate the side rail onto the headboard bolts. Using the supplied wrench loosely tighten the M8 spring washers and nuts to each pre-fitted bolt.

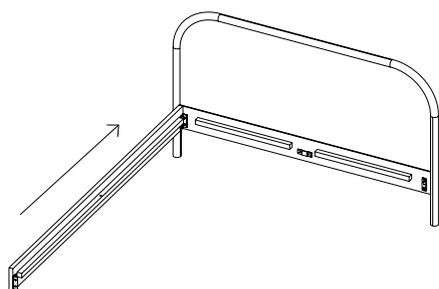


Step 2

Repeat with the second side rail.

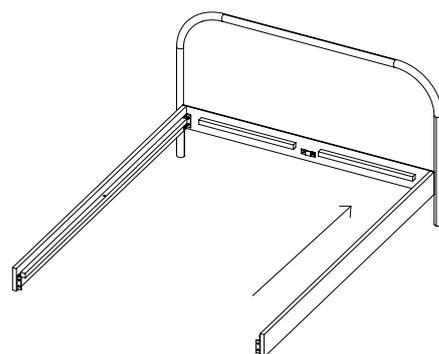



Step 3

Locate the footboard onto the side rails. Loosely tighten the M8 spring washers and nuts to each pre-fitted bolt.

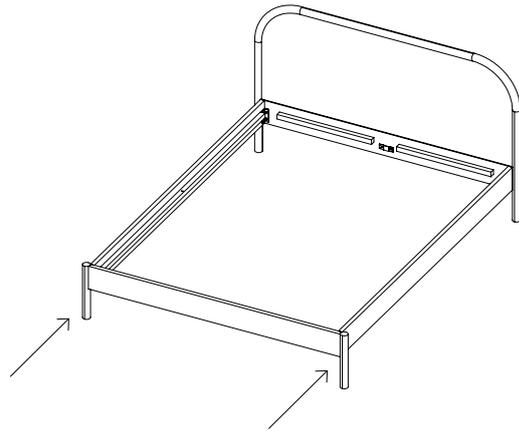

Step 4

Attach the legs to the center brace using the M8 screws and allen key. Locate the center brace by slotting it into the pre-fitted brackets on the headboard and footboard. Adjust the feet on the legs if needed.

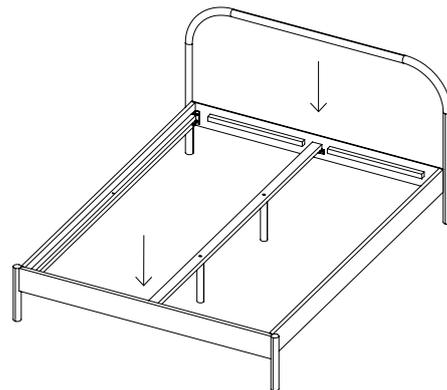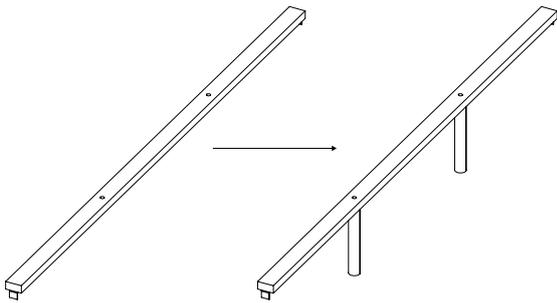

Step 5

Secure the cross brace using the M6 screws, washer and spring washer with the allen key. Tighten all nuts evenly to secure. Lower the slats gently in place to complete the assembly.

